


Instructions for Coding TS Mini/Midi Handsets

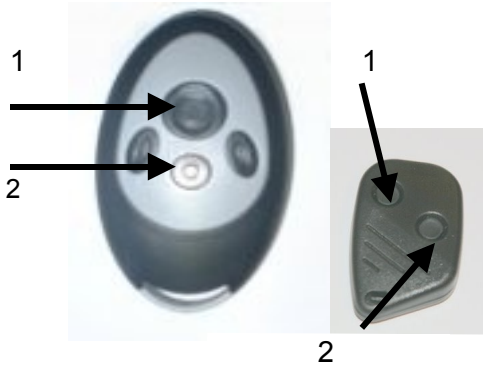

If you have one working handset and you want to code another handset from it.

1. Take a registered hand transmitter.
2. Open the garage door for at least 50cm and close it again using the existing hand transmitter.
3. You now have 10 seconds within which you must press buttons 1 & 2 on the existing hand transmitter (the round buttons shown in 1a Left) simultaneously for approx 3 seconds. The light on the Operator will start blinking – release the two buttons.
4. Take the new handset and press the button you want to use for the Operator.
5. The Operator's light will now stop blinking.

The new handset is now ready for use.

Health & Safety

CAUTION: This procedure is to be carried out by a competent person only.

If you do not have a working handset you will need to code it directly from the Operator.

1. Open the Operator's plastic cover. (One screw will need to be undone.)
2. Press the red LEARN button (shown in 1b Left) for approx 3 seconds, until the Operator's light starts blinking.
3. Take the new handset and press the button you want to use for the Operator.
4. The Operator's light will stop blinking.

The new hand transmitter is now ready for use.

Health & Safety

CAUTION: This procedure is to be carried out by a competent person only.

If you want to use the new handset with a Seip external receiver, (usually for gate systems or alarm systems, or other non Seip devices.)

The mini receiver is usually installed inside the housing of a component or in a box. You will have to open this to access the mini receiver.

1. Take the new handset and hold it so that it is touching the mini receiver beside the LED lamp.
2. Keep any button on the handset pressed (eg shown in 1c Left) until the LED lamp on the mini receiver comes on. Now release the button of the handset.
3. Press the same button again on the hand set. The LED will now switch off. This is the button you will use for the mini receiver.



1c.