


CHANGING A C75 TRANSFORMER INSTRUCTIONS

HEALTH & SAFETY: THESE PROCEDURES ARE TO BE CARRIED OUT BY A COMPETENT PERSON ONLY.

MAINS POWER NEEDS TO BE SWITCHED OFF BEFORE ANY CHANGES

CHANGING A C75 TRANSFORMER

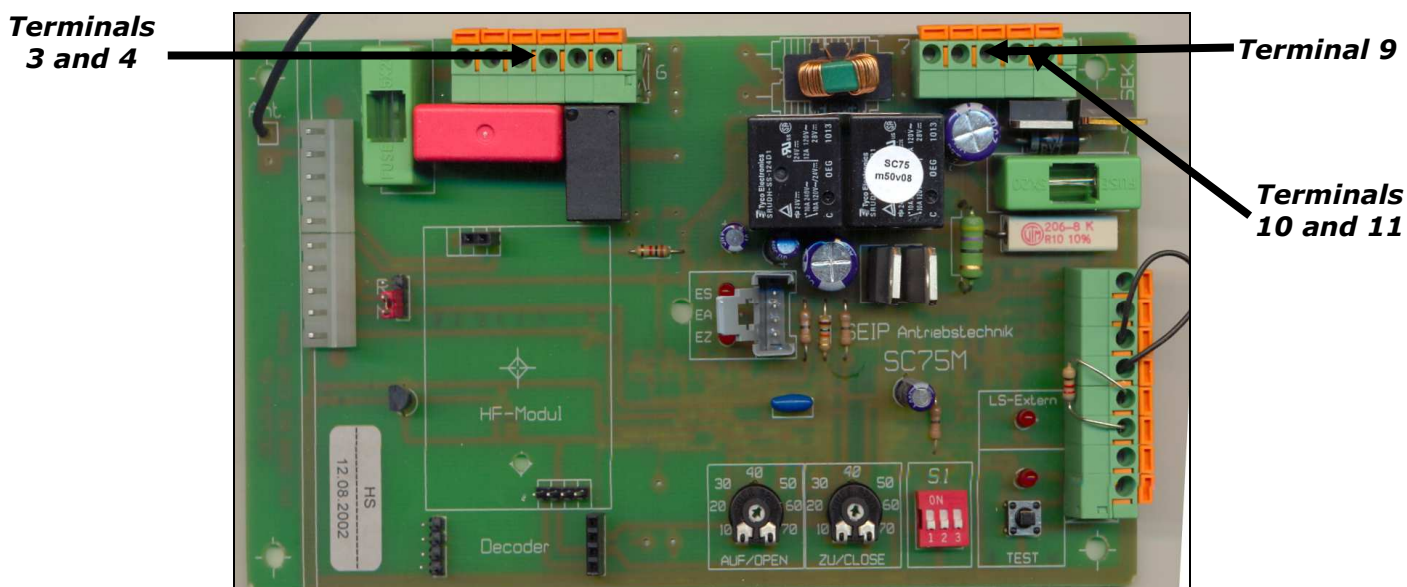

- 1) Completely remove the operator's light cover and grey plastic motor cover
- 2) Before removing the old transformer, please study wiring positions for a few moments
- 3) Carefully disconnect the old transformer from the printed circuit board
- 4) The transformer has 5 coloured wires, connect to the printed circuit board as follows:-



Black wire (230v AC) to terminals **3**
Black wire (230v AC) to terminals **4**
White wire (24v AC) to terminal **11**
White wire (24V AC) to terminal **10**
Red wire (0V, PCB) to terminal **9**

- 5) Once the new transformer is connected, replace the operators light cover and plastic motor cover
- 6) Now switch the operator back on at the mains power
- 7) Run operator fully up and down using the remote until the main operator light stops flashing